

No.8 Haitai Huake Rd2(Huayuan), Binhai Hi-Tech Zone, Tianjin 300384, China Tel: +86-22-58596037 Fax: +86-22-58596177 en.tiandy.com

How to add device to APP

Description: You will learn how to add device to APP by this document

Step1 Activate the camera

The default IP address of the Tiandy camera is 192.168.1.2, first time when you login camera's website, you need to set password for it

	Equipment activation	-	×	n in the second s			
	Equipment activatio						
	User Name	admin					
	Password						
	Password Strength	Poor Mid Strong					
		Please generate 6-15 digits password with two or more combinations of numbers, lowercase, capital letter and special character.		English	~		
	Password Confirm			iandy			
	Email						
		Optional (For Password Reset)					
		Confirm	Disabled				
A. S.		alle lle		Login			
		ап					
	Row Market						

Step2 Enable P2Pfunction

For our camera, spark, superlite, lite series don't support enable P2P function & ONVIF together, so when you use P2P, you need enable it at website Click QR cord icon, follow the hint, you will enable P2P







Step3 add camera at APP

Scan first QR cord to download app Use our APP scan second QR code, you can add device



After these steps, you can see the camera at your APP **Note:**

1.For the NVR, we have two places to show the QR cord, website page & Ui page, both of them at the preview page

2.The way to add NVR is same as camera, there is no need to enable P2P for NVR, because default setting is enabled

3.If your device doesn't show the second QR cord and the network without



4.For the camera, if you want to change back to onvif mode, you can change it at network setting page

Save

RTSP Path rtsp://<username>:<password>@<ip>:<port>/<channel>/<stream>

Example:rtsp://admin:admin@192.168.1.3:554/1/1

Cancel

channel:channel,1 to N;stream:stream,1st stream 1,2nd stream 2,3rd stream 3.

Tiandy	Live View	Playback	Log	Configuration	TC-C35MS SPEC:13/A/E/Y/M/C/H/2.7-13.5mm 🖄 admin 🕞
Basic Set	IP Filter	Access Platform	HTTPS		
Audio Video Set			iiiio		
Network	✓ Platform	Enabled			
Basic Set		Onvif			
Advanced Set		RTSP			
Safety management		2 000			Disable P2P & enable Onvit
Event Schedule		P2P			
Smart surveillance		Save	Cancel		
Storage					
System					
				STENDE CO. 114 AE Deck	to Desenué